

CBE-4 Roof Edge

Roof Edge Details Roof Edges and Gravel Stops


General

Note: All general instructions contained in the current JM Commercial/Industrial Roofing Systems Manual shall be considered part of this specification.

Roof Edge Wood Cant

Prior to the installation of any metal edging, the *JMCleanBond*® Base Sheet and Utility Sheet are carried up and secured to the wood cant with nails having a 1" (25 mm) head or disc at 4" (102 mm). Install the *JMCleanBond*® Cap Flashing on the cant and out onto the utility sheet so that it covers the selvage and aligns with the edge of the granules. The cap flashing should be rolled into place to ensure proper adhesion to the utility sheet.

Light gauge metals, such as copper, hot galvanized steel, or aluminum, shall be used for the edge metal. Refer to Section 2h on Specialty Roofing Products in the JM Commercial/Industrial Roofing Systems Manual for recommendations on metal gauge, size and cleat requirements, or in accordance with SMACNA procedures. The metal sections are secured to the wood cant with rubber-grommetted fasteners, at the center of the section and at the cover plates. The vertical face of the metal can be either held by a continuous cleat, or face fastened.

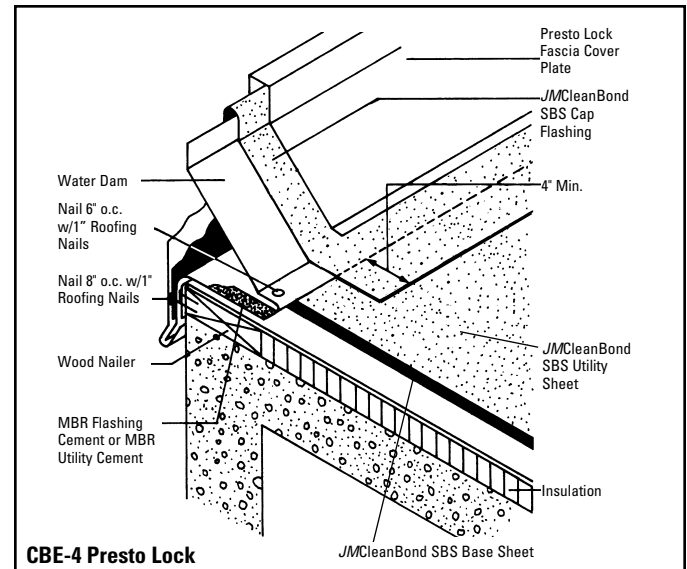

CBE-4 Presto Lock

Presto Lock

When bonding self-adhering materials to metal, Johns Manville requires cleaning the metal to remove any oil, grease, etc. The metal surface receiving the flashing should then be coated with metal primer or Asphalt Primer and allowed to dry.

Application

Wood nailers must extend horizontally beyond the metal flange of the edge piece. Nailers must be pressure treated with a salt preservative. The *JMCleanBond* Base Sheet should run over the roof's edge and extend 1" (25 mm) beyond the nailer. Install the Utility Sheet to the outer edge of the wood nailer. Install the Presto Lock® Fascia and Flashing System in accordance with the installation instructions provided with the product in conjunction with the *JMCleanBond* Cap Flashing as required.

Note: For the most current information on general guidelines, please refer to the System Considerations tab under Systems Introduction & Selection on the JM Roofing Web site. For specifications, flashing details and general installation information please refer to the System Application tab.

Refer to the Material Safety Data Sheet and product label prior to using this product.