



General Instructions

Style EJ/WC (For roof-to-wall and for curb-to-curb)

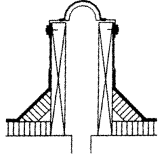


- Install all intersections & transitions first
- Leaving a 1/2" space, start 50' or 100' foot roll of straight product
- Leave a 1/2" space between foam on each 50' or 100' section, allowing "shiplapped" end to overlap next section, intersection, or transition

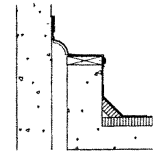

Step 1. After membrane flashing is installed, caulk along the top of curb with membrane compatible material.



Step 2. Fold over cover membrane to expose concealed nailing strip and nail 4" oc starting 1/2" from end, using 1 3/4" roofing nails, fold cover membrane over the nailing strip.

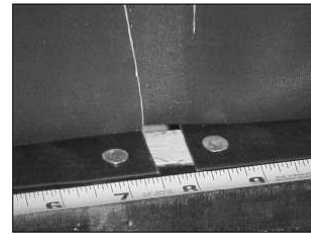


Step 3. Leave 1/2" between each run of material & start nailing 1/2" from end.




Step 4. Fold over cover membrane to expose concealed nailing strip, squeeze bellows to proper position, nail concealed nailing strip to top of other curb or to chalk line on wall, nailing 4" oc on the curb or 8" oc on the wall.


Vertical Distance Requirement in Roof to Wall Installations (for all styles)

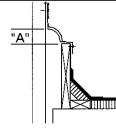

Mounting Bellows Width	Height "A"
4"*	2 1/2"
6"*	3 3/4"
8"*	5"
10"*	6 1/4"
12"*	7 1/2"
14"***	8 3/4"
16"***	10 1/4"
18"***	11 1/2"
20"***	12 3/4"
24"***	15 1/4"

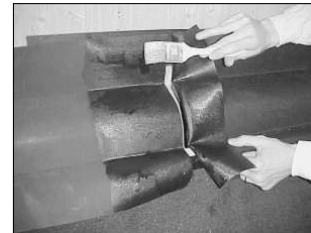

Step 5. Fold back the overlapped end, prime both sides with primer provided.

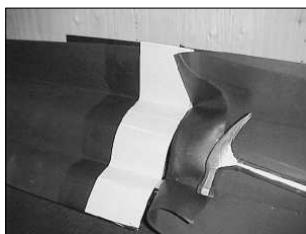


Step 6. Place the 3" seam tape into position over the end to be covered.



Step 7. Fold over the end lap, carefully peel away to release paper, smooth the end lap into position on the seam tape.




Step 8. Prime each end, place the splice tab equally over the full width of each end of the cover membrane.

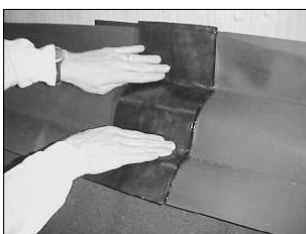

Step 9. Remove the release paper, smooth into place.



Step 10. Fasten the termination bar, included, along the top and/or bottom of the cover membrane.

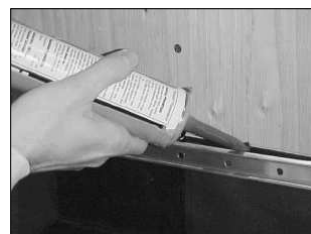

Step 11. Caulk along the top and/or bottom of the termination bar.